

WT-E ePTFEGasket Tape - Assembly Instructions

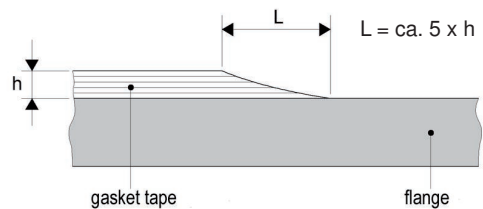


Figure 1

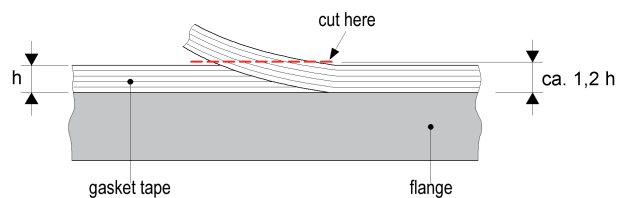


Figure 2



Figure 3

- Thoroughly clean sealing surfaces.
- Remove residues of old sealings and any grease or corrosion.
- Remove the protective film from the self-adhesive back for about 50 cm and mount the gasket tape centrally on the sealing surface.
- Execute a bevel cut as shown in Figure 1.
- Gradually mount the gasket tape on the sealing surface, simultaneously removing the protect film.
- Close and cut the gasket tape as shown in Figure 2.
- Using a torque wrench, tighten nuts crosswise in 3 to 4 progressive torque sequences until the optimal torque or bolt force is reached.
- For gasket tapes WT-E 04 and WT-E 06 join the endings by overlapping as shown in Figure 3.

Recommended Selection

Article description	Width x Thickness [mm x mm]
WT-E 04	width > 3 mm
WT-E 06	width > 3 mm
WT-E 10	width up to 15 mm
WT-E 15	< DN 500
WT-E 20	< DN 1000
WT-E 30	< DN 1500
WT-E 40	> DN 1500 or severely damaged sealing surfaces

Please note: All technical information and advice given is based on our previous experience to the best of our knowledge. However, this does not constitute any liability on our part. Given that only someone who is able to check all application conditions on site may reliably assess the performance of a product, specifications and values are always subject to revision by the user.

© Copyright 2013 . All rights reserved Rev.Nr.: 01/30.07.2013