



WT-R ePTFEGasket Tape - Assembly Instructions



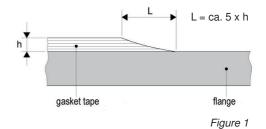

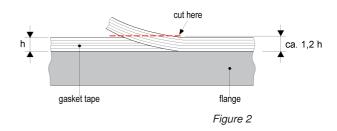

- Thoroughly clean the sealing surface and remove residues of old sealings and any grease or corrosion.
- Release protective the film from the self-adhesive back for about 50 cm and mount the gasket tape centrally on the sealing surface.
- Subsequently execute a bevel cut as shown in Fig. 1.
- Gradually mount the gasket tape centrally on the sealing surface, simultaneously removing the protective
- Close and cut the gasket tape as shown in Figure 2.
- Using a torque wrench, tighten nuts crosswise in 3 to 4 progressive torque sequences until the optimum torque or bolt force is reached.

Recommended Selection

Article	Width x Thickness
Description	[mm x mm]
WT-R 06	< DN 500
WT-R 08	DN 500 to DN 1000
WT-R 10	> DN 1000

Please note: All technical information and advice given is based on our previous experience to the best of our knowledge. However, this does not constitute any liability on our part. Given that only someone who is able to check all application conditions on site may reliably assess the performance of a product, specifications and values are always subject to revison by the user.

© Copyright 2013 . All rights reserved Rev.Nr.: 01/30.07.2013